

*FOR THE WINNERS' CIRCLE*



**ANDASEAT**  
**KAISER 3E USER MANUAL**

ASSEMBLY INSTRUCTIONS AND USER GUIDE



## PACKAGE CONTENTS

---

Thank you for choosing AndaSeat!  
Before using this product, please read this manual carefully  
and keep it available for future reference.

- 1X** Backrest
- 1X** Seatbase
- 1X** Wheel Base
- 2X** Armrests
- 1X** Tilt Mechanism (2 Levers)
- 2X** Magnetic Side Covers
- 5X** Casters (Wheels)
- 12X** M8 Screws (2pcs Spare Screws)
- 1X** Long Allen Key
- 1X** Gas Piston+Sleeve
- 1X** Safety Cap
- 1X** Magnetic Head Pillow (Refer to the product you purchased.)

# ASSEMBLY GUIDE


## 1. Install the Casters

Flip the wheelbase over and press the casters into the wheelbase.



## 3. Install the Armrests

Mount the armrests to the seat with M8 screws and washers. Make sure to correctly identify the left and right armrests.

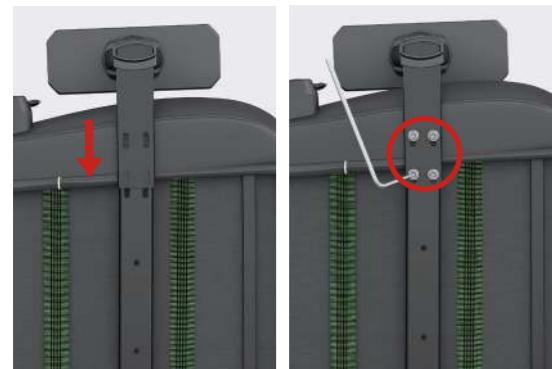

## 2. Install the Gas Piston

Turn the wheelbase right side up, then insert the gas piston in the middle and cover it with the sleeve.



## 4. Unscrew the Backrest

Remove the 4 pre-installed M8 screws from the backrest using the included Allen key.



## 5. Connect Backrest Right Side

Slide the right side backrest bracket down onto the right recline bracket. Insert M8 screws previously removed from the backrest and screw them in halfway.



## 6. Connect Backrest Left Side

Push the left recline bracket up to align with the screw holes on the left of the backrest. Insert the M8 screws, then tighten all 4 fully on both sides of the backrest using the Allen key provided.



## 7. Install Side Covers

Align the magnetic side covers on top of the brackets of backrest and they will snap magnetically in place.  
**Notice: The one with a gap is the right side cover.**



## 8. Remove Notice Strap and Safety Screw

Remove the notice strap, then take off the red screw on right recline side by hand. This allows the recline to be used.

**Note: Well keep the red screw as it can be re-installed for child safety.**



## 9. Insert the Safety Cap

Cover the safety cap on this hole. This safety cap can be removed by pushing it from the inside with the red screw.



## 10. Set the Chair Facing Down

Gently lift the chair and put it facing down.



## 11. Assemble the Tilt Mechanism Levers


Align the levers with the tilt mechanism facing the front and fully insert to click in place.



## 12. Attach the Tilt Mechanism

Align the tilt mechanism with the bottom of the seat base. Insert four M8 screws halfway to hold it in place, then tighten them fully using the Allen key.

**Reminder:** Make sure the FRONT sign is aligned with the seat front.

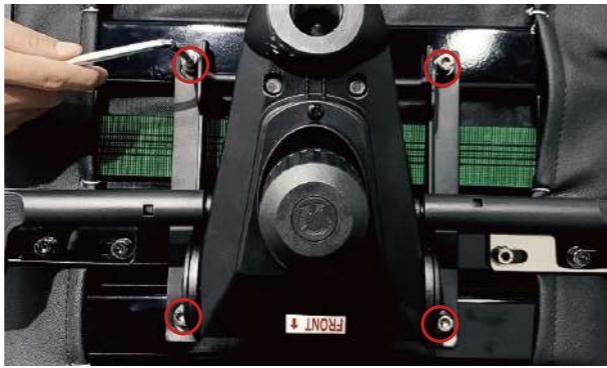

## 13. Attach the Wheelbase

Lift the assembled wheelbase and insert the gas piston into the seat base.



## 14. Put the Chair Up

Carefully turn the chair upright to complete the assembly.



# HOW TO ADJUST

## 155° Backrest Recline

Pull the recline lever fully and hold it, lean back gently to your desired angle, then release the lever to lock in place.



## Arms

Press and hold ① to move front-back or rotate;  
Press and hold ② to move left-right;  
Lift and hold ③ to adjust up-down.



## Armrest-to-armrest Width

Loosen the M8 screws on the armrest mounts, adjust the armrests to the desired width, then tighten the screws to secure them.

## Tilt Tension

Turn the tension knob clockwise to loosen or counter-clockwise to tighten. Adjust based on weight, and avoid turning past its limits.



## Multi-Tilt Mechanism

Right Lever (While Seated): Pull the right lever up to adjust the height of the chair.  
Left Lever (While Seated): Push down to lock the tilt mechanism, pull up to unlock.



# SAFETY INSTRUCTION

## Recommended Size

Chair Size	L	XL
Recommended Weight	< 120kg (260lbs)	80 - 180kg (175 - 395lbs)
Recommended Height	150 - 180cm (4'11" - 5'11")	181 - 210cm (5'11" - 6'11")

## Failure to follow these instructions may result in serious personal injury or property damage.

1. Do not use the chair for purposes other than the manufacturer originally intended.
2. Do not stand on the chair as a ladder.
3. Do not have more than one person on the seat.
4. Do not sit on the edge of the seat.
5. Do not place the chair near flammables.
6. Place it in a dry and cool place.
7. Avoid exposing the chair to direct sunlight or other heat sources.
8. It is recommended to mount the chair on a soft surface to avoid damage to the upholstery.
9. Use soft and dry cloth for general cleaning and maintenance of the chair. Do not apply corrosive chemicals on the chairs.
10. When transporting the product, proceed with caution.
11. Any modifications and changes of product components that could void your warranty.



Sit in the center of the chair.



Do not stand on the chair.



Do not use the chair with more than one person.



Do not use rocking mode over weight limit.



Do not push the chair around when a person is sitting in it.



Do not push down on the backrest when a person is reclined.



Do not place all your weight on the backrest only.



Do not place your hand or fingers near the recline mechanism.

For warranty information, please visit our Warranty & Return Policy:

<https://www.andaseat.com/pages/warranty>

If you have any questions or need any assistance, please contact: [sales-support@andaseat.com](mailto:sales-support@andaseat.com)